

Assembly & Operations Manual



Viper Mid MK 2 Wire Rope Lubricator



Contents

1.	Introduction	<u>3</u>
2.	Viper Mid MK 2 Kit Components Inclusions	<u>4</u>
3.	Viper Mid MK 2 Components Assembled Kits & Components	<u>5</u>
3.1.1	Viper Mid MK 2 Standard Kit Complete 20kg	<u>5</u>
3.1.2	Viper Mid MK 2 Complete Collar	<u>6</u>
3.1.3	Viper Mid MK 2 Standard Complete Pump Kit 20kg	<u>7</u>
3.1.4	Viper Mid MK 2 Standard Complete Hose 20kg & 50kg	<u>8</u>
3.2.1	Viper Mid MK 2 High Speed Kit Complete 20kg	<u>9</u>
3.2.2	Viper Mid MK 2 HS Complete Collar	<u>10</u>
3.2.3	Viper Mid MK 2 HS Complete Pump Kit 20kg	<u>11</u>
3.2.4	Viper Mid MK 2 HS Complete Hose 20kg & 50kg	<u>12</u>
3.3.1	Viper Mid MK 2 Standard Kit Complete 50kg	<u>13</u>
3.4.1	Viper Mid MK 2 High Speed Kit Complete 50kg	<u>15</u>
3.5.1	Viper Mid MK 2 Standard Kit Complete 180kg	<u>17</u>
3.6.1	Viper Mid MK 2 High Speed Kit Complete 180kg	<u>20</u>
4.	Assembly Instructions Viper Mid MK 2 Standard	<u>23</u>
5.	Ratchet Strap Buckle Assemblies – Ref: AW107	<u>26</u>
6.	Operating Instructions Viper Mid MK 2 Standard	<u>27</u>
7.	Lubrication Penetration	<u>29</u>
8.	Equipment Specifications	<u>30</u>
9.	Trouble Shooting	<u>31</u>
10.	Safety Recommendations – Caution Level Rating	<u>32</u>
11.	Safety Recommendations - Danger Rating	<u>33</u>
12.	Guarantee	<u>34</u>

1. Introduction

The Viper Mid MK 2 Wire Rope Lubricator is an Australian designed and manufactured lubricator for wire rope sizes from 6mm to 67mm. It provides fast and effective single pass lubrication of wire ropes, eliminating the slow and arduous task of manual lubrication. Lubrication of wire ropes with the Viper system provides superior protection against corrosion and fretting wear by forcing lubricant into the core of the wire rope while also coating the outer strands. The use of the Viper Mid MK 2 WRL improves operator safety and reduces the environmental impact of wire rope lubrication for any size operation.

Key Features of the Viper Mid MK 2 WRL Include:

1. The Collar is constructed from high grade aluminium with a high visibility corrosion resistant coating.
2. The Viper Collar is 32% lighter than the original Viper and incorporates cast carry handles for easier handling.
3. Unique polyurethane Seal design provides largest pressure contact area to ensure maximum lubrication penetration.
4. Durable and wear resistant polyurethane Seals last thousands of metres in normal service.
5. Seal and scraper size range to cater for rope sizes 6mm to 67mm.
6. High pressure high flow 45:1 grease pump delivers lubricant at 4,500 grams per minute and pressures up to 5,500 psi.
7. Global distribution network which provides local customer support.

Viper Mid MK 2 Collar with Seals Inserted



2. Viper Mid MK 2 Kit Component Inclusions:

1. Viper lubricator Collar, cast aluminium with inbuilt handles, includes lubricant delivery line quick connect coupling and excess lubricant fitting.
2. High pressure high flow customised Viper 45:1grease pump to suit 20kg/50kg/180kg drum sizes which comes preassembled with:
 - a) Air control valve
 - b) Air regulator with gauge
 - c) Hi pressure grease flow control valve
 - d) Male quick connect fitting

Note: Refer to drawings
3. Four (4) metre, high pressure ½" hydraulic hose complete with female quick connect couplings on each end.
4. One (1) metre clear hose for excess lubricant discharge.
5. Two (2) x 2 metre ratchet straps rated to 500kg.
6. Four (4) x "Bow" shackles.
7. Viper Collar shoulder carry strap.
8. Heavy duty aluminium storage case with stainless steel fixtures.
9. Polyurethane Seals & Aluminium Scraper Plates (ordered separately)
 - a) Sized to suit specific size ropes 6mm to 67mm
 - b) Refer to Seal & Scraper Selection Guide
10. Viper Wire Cleaners (optional accessory)
 - a) Available to suit a variety of ropes – refer to Selection Guide when ordering



Note: Seals, Scrapers and Cleaners sold separately

3. Viper Mid MK 2 Assembled Kits & Components

3.1.1 Viper Mid MK 3 Standard Kit Complete 20kg

Diagram of the Viper Mid MK3 Standard Kit Complete 20kg assembly. The diagram shows a green Viper Mid MK3 unit connected to a red drum and a yellow hose. The unit is labeled with numbers 1 through 15. The drum is labeled with numbers 1 through 15. The hose is labeled with numbers 1 through 15.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMIDKCOLLAR-COMLETE	VIPER MID MK1 COMPLETE WITH FITTINGS, MALE COUPLER AND PLUGS	1
2	---	WIRE ROPE	---
3	VIPER-DS-AS242310	BOW SHACKLE	4
4	VIPER-HDR1W25	RAATCHET STRAP	2
5	VIPERHOSE-4M-1/2	4MIRS 1/2" DWB HOSE WITH QUICK CONNECTS AT EACH END	1
6	VIPER-OVERFLOWHOSE	OVERFLOW HOSE	1
7	FLX-0V12/15	FLX-0V12/15	1
8	PNA-1823391911	GREASE FLOW CONTROL VALVE	1
9	FLX-7180-3/8	AIR FLOW CONTROL VALVE	1
10	FLX-4302	AIR PRESSURE REGULATOR WITH GAUGE	1
11	FLX-4314A	20KG DRUM COVER	1
12	---	20KG FOLLOWER PLATE	1
13	---	VIPER LUBRICANT PAIL	1
14	**REF1**	POLYURETHANE SEAL	1 SET
15	**REF2**	VIPER SCRAPPER PLATE	OF 4

Viper WSL

Viper Mid MK1
Complete 20KG Kit
Part No: VP-00120


REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

3.1.2 Viper Mid MK 2 Standard Complete Collar

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMIDMKCOLLAR-TOP	VIPER COLLAR MID MK II TOP HALF	1
2	VIPERMIDMKCOLLAR-BOTTOM	VIPER COLLAR MID MK II BOTTOM HALF	1
3	VIPERMIDMKCOLLAR-2PL BSP	MALE 1/2" OUST. CONNECT ADAPTOR	1
4	HL-A-0608	3/8" BSPT MALE X 1/2 BSPT MALE FITTING	1
5	HL-A-0608	SCRAPER PLATE	1 SET OF 4
6	HL-A-0608	M6X12MM FLAT COUNTERSINK SOCKET SCREW	20
7	VIPER-ENDSCREWS	3/8" BSPT PLUG	1
8	HL-A-06	POLYURETHANE SEAL	1
9	HL-A-06	LOCKING MECHANISM MADE OF SWIVEL SCREW, LOCK NUT WITH HANDLE AND 2 WASHERS	2
10	VIPERMIDMKII-LOCKPINS	LOCK MECHANISM	2
11	VIPERMIDMKII-LOCKPINS	PINS TO HOLD BOTH HALVES OF THE VIPER MID MKII	2
12	VIPERMIDMKII-HINGEPINS	PINS TO HOLD BOTH HALVES OF THE VIPER MID MKII	2


REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE




Viper Mid MKII
Complete Collar
VIP-001 20

3.1.3 Viper Mid MK 2 Standard Complete Pump 20kg

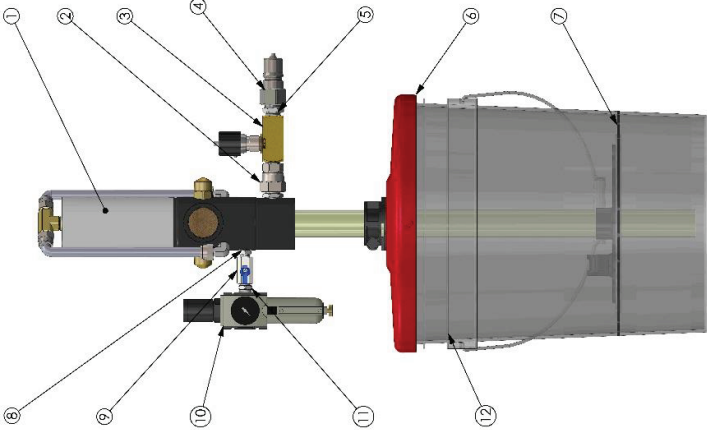

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-40211WDS	VIPER GREASE PUMP 45 LIT. 4,500 GRAMS/MIN	1
2	HL-A-C-0808	1/2" BSPT MALE X 1/2" BSPT FEMALE SWIVEL	1
3	SFE-DV12V	CONTROL VALVE	1
4	VIPER(MID)MK1A(B)1/2PL BSP	GREASE FLOW CONTROL VALVE	1
5	HL-A-A-0808	1/2" BSPT MALE QUICK COUPLER	1
6	FLX-4302	1/2" BSPT MALE X 1/2" BSPT MALE FITTING	1
7	FLX-4314A	20KG DRUM COVER	1
8	HL-A-A-0406	20KG FOLLOWER PLATE	1
9	PNA-1823391911	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
10	FLX-7180-3/8	AIR FLOW CONTROL VALVE	1
11	HL-A-A-0406	AIR PRESSURE REGULATOR WITH GAUGE	1
12	-----	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
		VIPER LUBRICANT PAIL	1

**Viper**[®] WRL
Complete Pump Kit
VP-Q0120

ITEM NO.

QTY.

DESCRIPTION

1

1

Viper Mid MK1 Complete Pump Kit

2

1

VP-Q0120

3

1

VP-Q0120

4

1

VP-Q0120

5

1

VP-Q0120

6

1

VP-Q0120

7

1

VP-Q0120

8

1

VP-Q0120

9

1

VP-Q0120

10

1

VP-Q0120

11

1

VP-Q0120

12


1

VP-Q0120

REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

3.1.4 Viper Mid MK 2 Standard Complete Hose 20kg
(included in 20kg & 50kg Kits)




ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	4MTR 1/2" DWB HOSE		1
2	HI-A-A-0808	1/2" BSPT MALE X 1/2" BSPT MAL FITTING	2
3	VIPERMIDMKIF-BIR12PL BSP	1/2" QUICK CONNECT FEMALE ADAPTER	2



Viper Mid MKII
Complete Hose
VIP-00120

REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

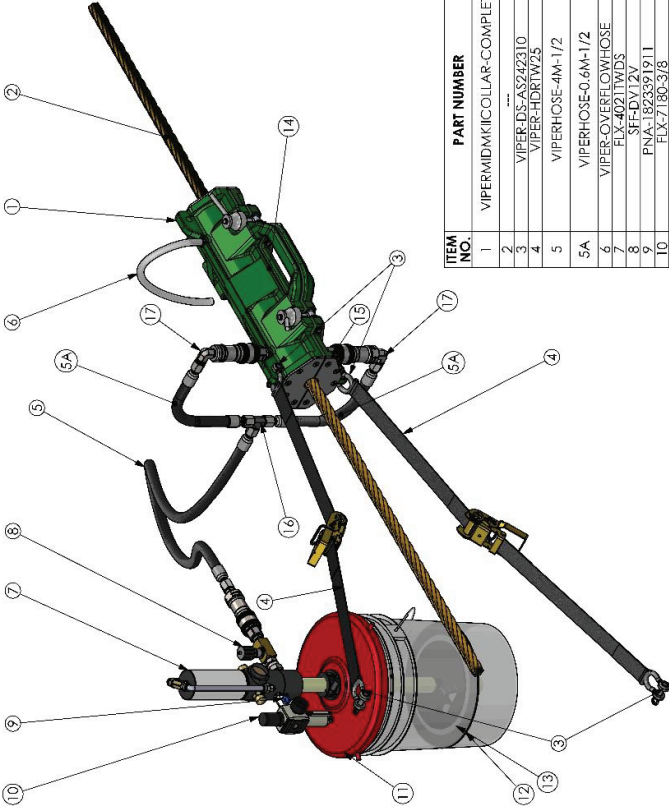3.2.1 Viper Mid MK2 High Speed Kit Complete 20kg




ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMIDMKCOLLAR-COMLETE	VIPER MID MK2 COMPLETE WITH FITTINGS, MALE COUPLER AND PLUGS	1
2	---	WIRE ROPE	---
3	VIPER-DS-15242310	ROPE SEAL	4
4	VIPER-HDR1W23	ROPE FELT WIP	2
5	VIPERHOSE-4M-1/2	4MTRS 1/2" DWB HOSE WITH QUICK CONNECTS AT ONE END	1
5A	VIPERHOSE-0.6M-1/2	0.6MTRS 1/2" DWB HOSE WITH QUICK CONNECTS AT ONE END	2
6	VIPER-OVERFLOWHOSE	OVERFLOW HOSE	1
7	FLX-40211WDS	VIPER GREASE PUMP 45L/4,500 GRAMS/MIN	1
8	FLX-40211WDS	GREASE FLOW CONTROL VALVE	1
9	FLX-40211WDS	MALE BRASS COUPLER	1
10	FLX-7180-3/8	AIR PRESSURE REGULATOR WITH GAUGE	1
11	FLX-4302	20KG DRUM COVER	1
12	FLX-4314A	20KG FOLLOWER PLATE	1
13	---	VIPER LUBRICANT PALE	1
14	**REF1**	POLYURETHANE SEAL	1 SET OF 4
15	**REF2**	VIPER SCRAPPER SEAL	1
16	HL-A-A-090808	TEE FITTING 1/2" BSP1 MALE (3)	1
17	HL-A-A-900808	1/2" BSP1 MALE X 1/2" BSP1 MALE ELBOW	2



Viper Mid MK2 HS
Complete 20KG KIT
--- VP-00121 ---

REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

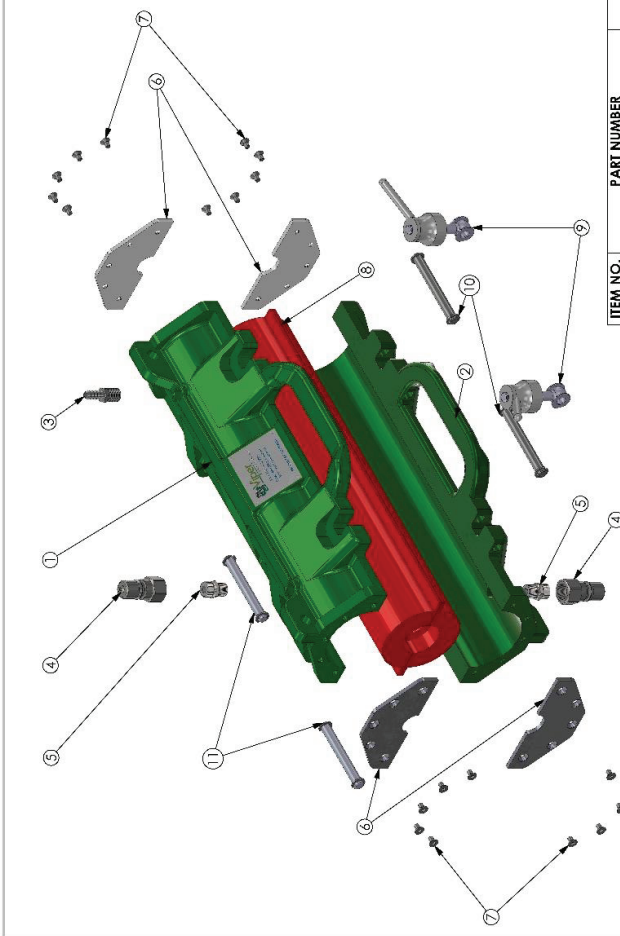3.2.2 Viper Mid MK 2 High Speed Complete Collar



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMIDMKII-COLLAR-TOP	VIPER COLLAR MID MKII TOP HALF	1
2	VIPERMIDMKII-COLLAR-BOTTOM	VIPER COLLAR MID MKII BOTTOM HALF	1
3	VIPER-HOSE-TAIL	OVERFLOW HOSE	1
4	VIPERMIDMKII-M-BR12PL-BSP	MALE 1/2" QUICK CONNECT ADAPTOR	2
5	HL-A-A-0008	3/8" BSP MALE X 1/2" BSP MALE FITTING	2
6	---REF1---	SCRAPER PLATE	1 SET OF 4
7	---REF2---	M6X12MM FLAT COUNTERSINK SOCKET SCREW	20
8	VIPER-END-SCREWS	LOCKING MECHANISM MADE OF SWIVEL SCREW, LOCK NUT WITH HANDLE AND 2 WASHERS	2
9	VIPERMIDMKII-LOCKMECHANISM	PINS TO SUPPORT THE VIPERMIDMKII LOCKMECHANISM	2
10	VIPERMIDMKII-LOCKPINS	PINS TO HOLD BOTH HALVES OF THE VIPER MID MKII	2
11	VIPERMIDMKII-HINGEPINS		



Viper Mid MKII HS
Complete Collar
VIP-00121


ITEM NO.	QTY.	DESCRIPTION
1	1	VIPERMIDMKII-COLLAR-TOP
2	1	VIPERMIDMKII-COLLAR-BOTTOM
3	1	VIPER-HOSE-TAIL
4	2	VIPERMIDMKII-M-BR12PL-BSP
5	2	HL-A-A-0008
6	1 SET OF 4	SCRAPER PLATE
7	20	M6X12MM FLAT COUNTERSINK SOCKET SCREW
8	2	VIPER-END-SCREWS
9	2	VIPERMIDMKII-LOCKMECHANISM
10	2	VIPERMIDMKII-LOCKPINS
11		VIPERMIDMKII-HINGEPINS

REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE


REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

3.2.3 Viper Mid MK 2 High Speed Complete Pump 20kg

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-4021WDS	VIPER GREASE PUMP 45/1.4.5 LTRS/MIN	1
2	HL-A-C-0808	1/2" BSPT MALE X 1/2" BSPT FEMALE SWIVEL FITTING	1
3	SFF-DV12V	GREASE FLOW CONTROL VALVE	1
4	VIPERMIDMKIIHSBRI2PLBSP	1/2" BSPT MALE QUICK COUPLER	1
5	HL-A-A-0608	1/2" BSPT MALE X 1/2" BSPT MALE FITTING	1
6	FLX-4302	20KG DRUM COVER	1
7	FLX-4314A	20KG FOLLOWER FLATE	1
8	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
9	PNA-1923391911	AIR FLOW CONTROL VALVE	1
10	FLX-7180-3/8	AIR PRESSURE REGULATOR WITH GAUGE	1
11	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
12	----	VIPER LUBRICANT PAIL	1




Viper Mid MKII HS Complete Pump Kit
VIP-00121

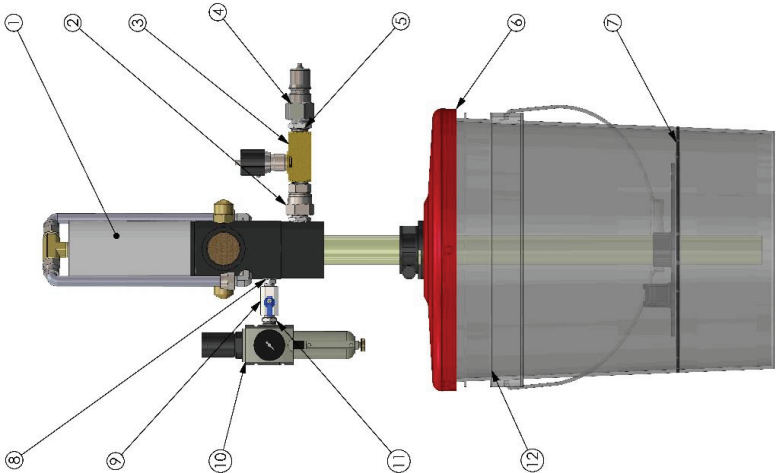

3.2.4 Viper Mid MK 2 High Speed Complete Hose
(included in 20kg & 50kg kits)



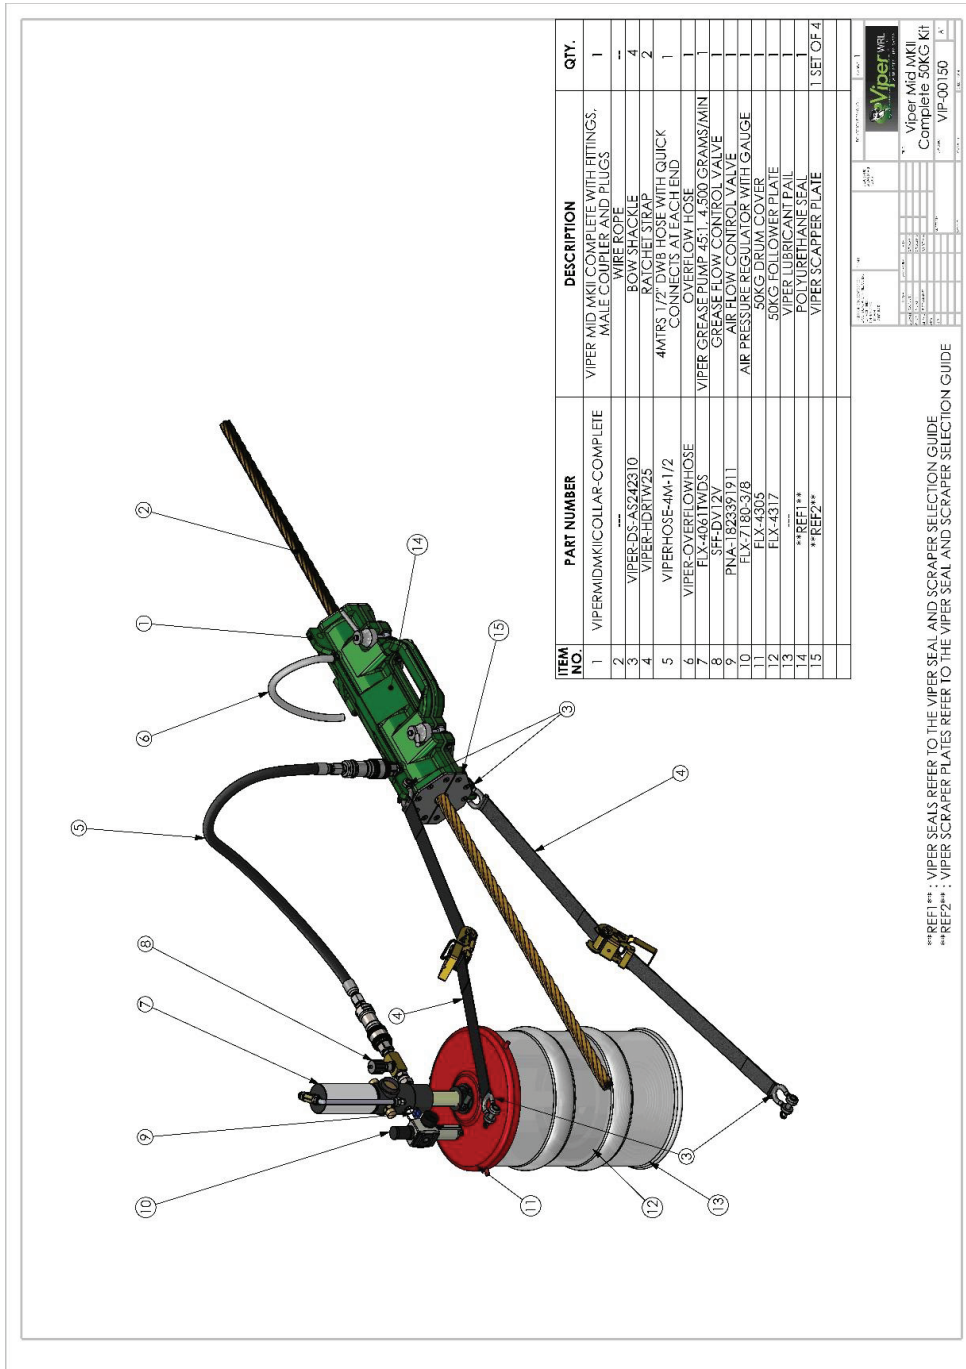

3.3.3 Viper Mid MK 2 Standard Complete Pump 50kg

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-4061TWDS	VIPER GREASE PUMP 45L 4,500 GRAMS/MIN	1
2	HL-A-C-0808	1/2" BSPT MALE X 1/2" BSPT FEMALE SWIVEL	1
3	SFF-DV12V	GREASE FLOW CONTROL VALVE	1
4	VIPERMIDMKII-M-12PL-BSP	1/2" BSPT MALE QUICK COUPLER	1
5	HL-A-A-0808	1/2" BSPT MALE X 1/2" BSPT MALE FITTING	1
6	FLX-4305	50KG DRUM COVER	1
7	FLX-4317	50KG FOLLOWER PLATE	1
8	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
9	PNA-1823391911	AIR FLOW CONTROL VALVE	1
10	FLX-7180-3/8	AIR PRESSURE REGULATOR WITH GAUGE	1
11	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
12	---	VIPER LUBRICANT PAIL	1

Viper Mid MKII
Complete 50KG Pump Kit

VIP-00150

3.4.1 Viper Mid MK2 High Speed Kit Complete 50kg


Diagram illustrating the Viper Mid MK2 High Speed Kit assembly, showing the pump unit, hoses, scraper assembly, and wire rope. The diagram is labeled with numbers 1 through 17, corresponding to the parts listed in the table.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMIDKICOLLAR-COMLETE	VIPER MID MKII COMPLETE WITH FITTINGS, MALE COUPLER AND PLUGS	1
2	---	WIRE ROPE	---
3	VIPER-DS-4S242310	BOW SHACKLE	4
4	VIPER-HDRTW25	RATCHET STRAP	2
5	VIPERHOSE-4M-1/2	4MTRS 1/2" DWB HOSE WITH QUICK CONNECTS AT ONE END	1
5A	VIPERHOSE-0.6M-1/2	0.6MTRS 1/2" DWB HOSE WITH QUICK CONNECTS AT BOTH END	2
6	VIPER-OVERFLOWHOSE	OVERFLOW HOSE	1
7	FLX-4061TWDS	VIPER GREASE PUMP 4S/1 4,500 GRAMS/MIN	1
8	SFF-DV12V	GREASE FLOW CONTROL VALVE	1
9	PNA-1823391911	AIR FLOW CONTROL VALVE	1
10	FLX-7180-3/8	AIR PRESSURE REGULATOR WITH GAUGE	1
11	FLX-4305	50KG DRUM COVER	1
12	FLX-4317	50KG FOLLOWER PLATE	1
13	---	VIPER LUBRICANT PAIL	1
14	REF1**	POLYURETHANE SEAL	1
15	REF2**	VIPER COUPLER	1
16	HLA-A-XL0808	1/2" BSPT MALE X 1/2" BSPT MALE (3)	1 SET OF 4
17	HLA-A-90-0808	1/2" BSPT MALE X 1/2" BSPT MALE ELBOW	2


REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

Viper
WIRE
Viper Mid MKIHS
Complete 50KG Kit
--- VIP-00151

3.4.3 Viper Mid MK 2 High Speed Complete Pump 50kg

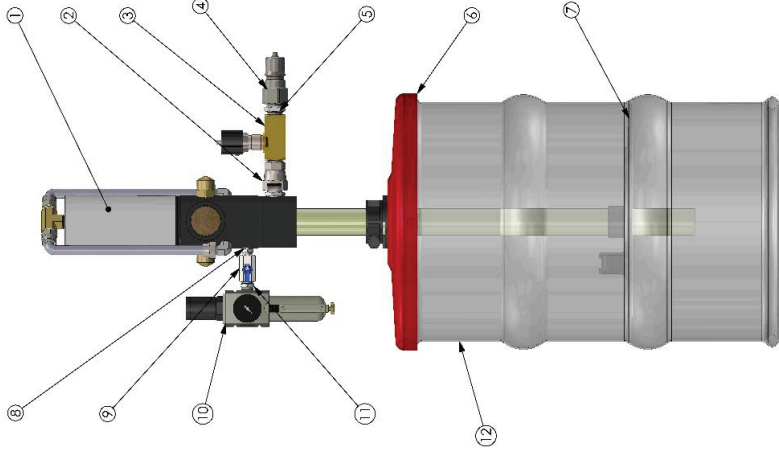


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-4061TWS	VIPER GREASE PUMP 45L 4 500 GRAMS/MIN	1
2	HL-A-C-0808	1/2" BSPT MALE X 1/2" BSPT FEMALE SWIVEL FITTING	1
3	SFE-DV12V	GREASE FLOW CONTROL VALVE	1
4	VIPERMIDMK2B12P1 BSPT	1/2" BSPT MALE X 1/2" BSPT FEMALE SWIVEL FITTING	1
5	HL-A-C-0808	1/2" BSPT MALE X 1/2" BSPT FEMALE SWIVEL FITTING	1
6	FLX-4305	50KG DRUM COVER	1
7	FLX-4317	50KG FOLLOWER PLATE	1
8	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
9	PNA-1823391911	AIR FLOW CONTROL VALVE	1
10	FLX-7180-3/8	AIR PRESSURE REGULATOR WITH GAUGE	1
11	HL-A-A-0406	1/4" BSPT MALE X 3/8" BSPT MALE FITTING	1
12	---	VIPER LUBRICANT PAIL	1




Viper Mid MK2 60 Kg HS Complete Pump Kit

Part No.	Part Name	QTY.
VIP-Q0151	Viper Mid MK2 60 Kg HS Complete Pump Kit	1

3.5.1 Viper Mid MK 2 Standard Kit Complete 180kg

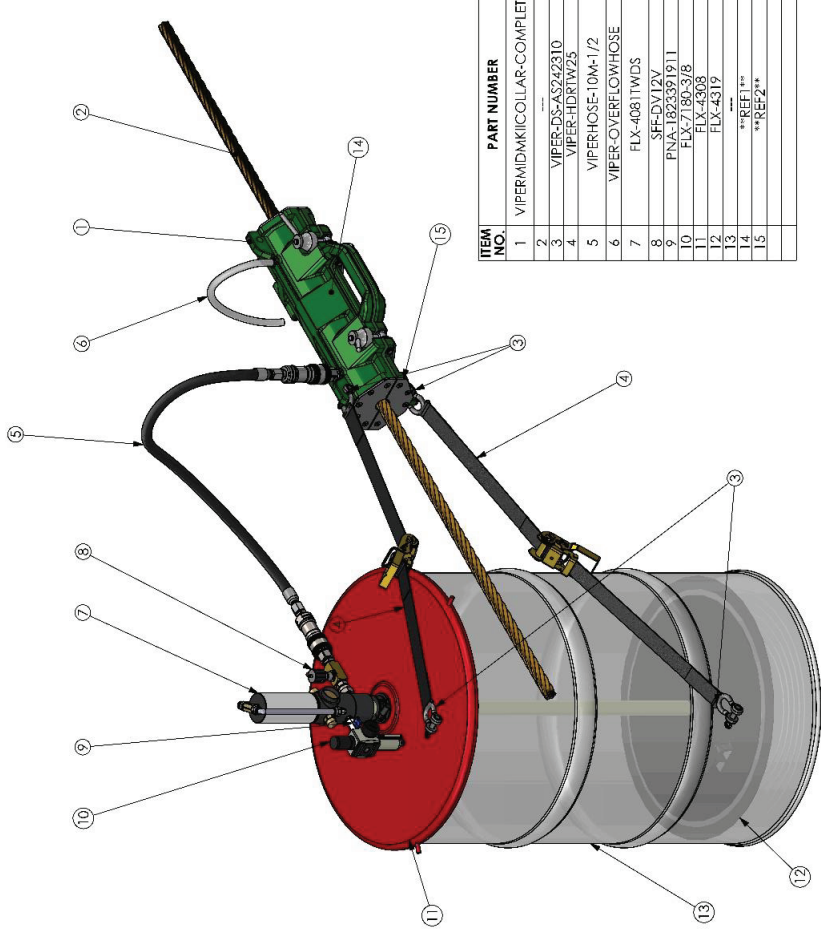


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMIDMKCOLLAR-COMLETE	VIPER MID MK2 COMPLETE WITH FITTINGS, MALE COLLAR AND PLUGS	1
2	-----	WIRE ROPE	---
3	VIPER-DS-AS242310	ROW SHACKLE	4
4	VIPER-HD6TW25	RATCHET STRAP	2
5	VIPERHOSE-10M-1/2	10MTRS 1/2" DWB HOSE WITH QUICK CONNECTS AT EACH END	1
6	VIPER-OVERFLOWHOSE	OVERFLOW HOSE	1
7	FLX-4061TWDS	VIPER GREASE PUMP 45l, 4,500 GRAMS/MIN	1
8	SFDV12V	GREASE FLOW CONTROL VALVE	1
9	PVX-823391911	PLUG FOR CONTROL VALVE	1
10	FLX-2780318	AIR PRESSURE REGULATOR WITH GAUGE	1
11	FLX-4308	180KG DRUM COVER	1
12	FLX-4319	180KG FOLLOWER PLATE	1
13	-----	VIPER LUBRICANT SEAL	1
14	**REF1**	POLYURETHANE SEAL	1
15	**REF2**	VIPER SCRAPPER PLATE	1 SET OF 4

**Viper**
Viper Mid MkII
Complete 180KG Kit
VIP-Q0180

REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

3.5.3 Viper Mid MK 2 Standard Complete Pump 180kg

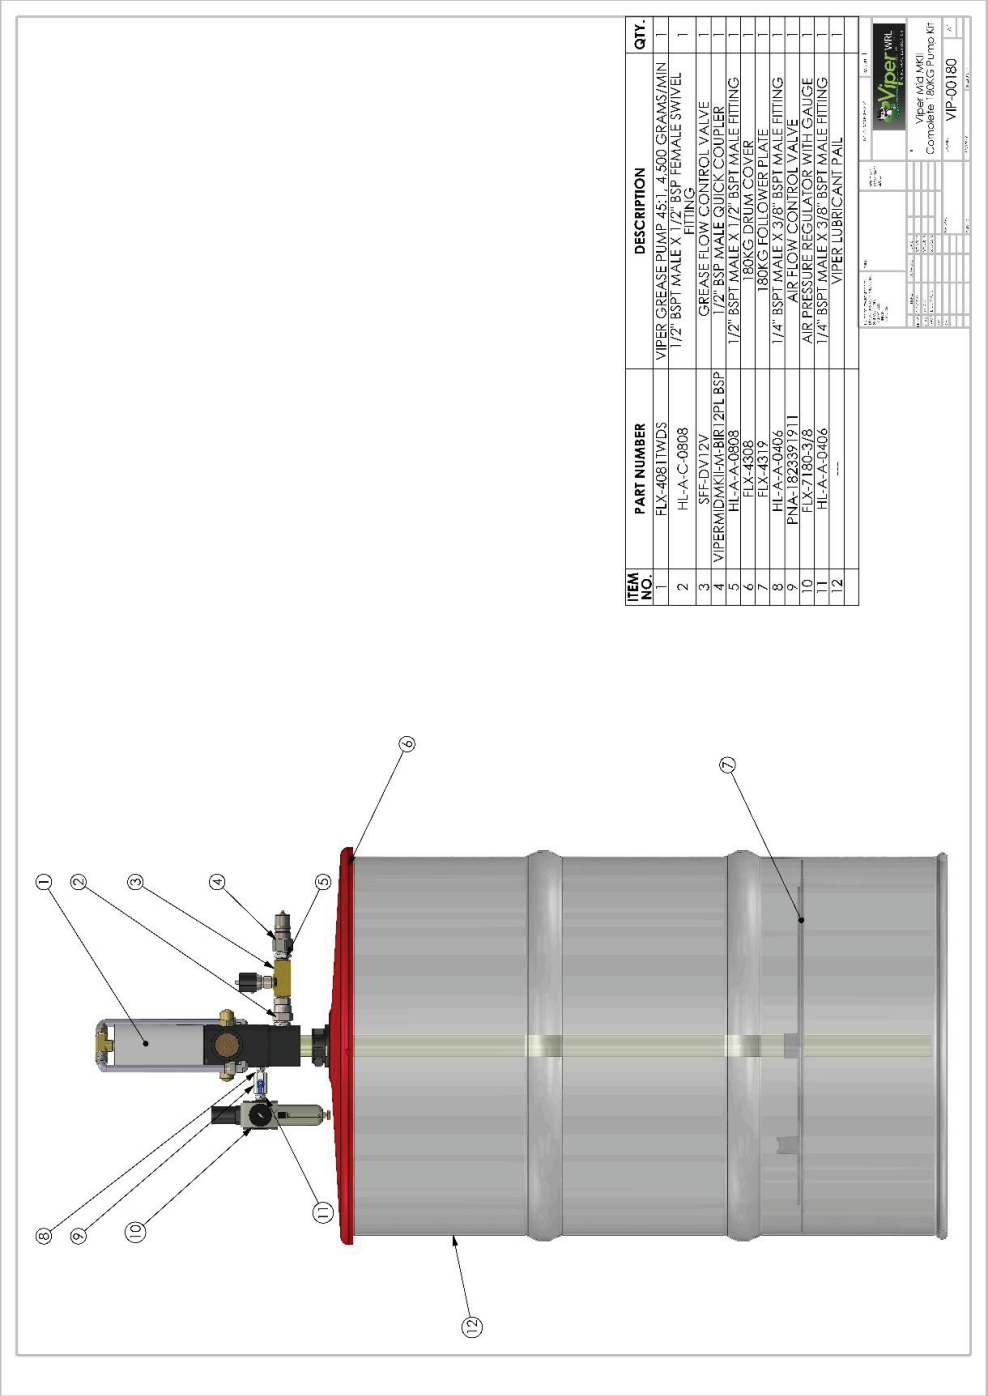

3.5.4 Viper Mid MK 2 Standard Complete Hose 180kg



Diagram of the Viper Mid MK 2 Standard Complete Hose 180kg. The hose is coiled and shown with two quick connect fittings. Callouts 1, 2, and 3 point to the hose body and the fittings.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	HLA-A-0808	10MTRS 1/2" DWG8 HOSE	1
2	VIPERMIDMK1F-3R12PL BSP	1/2" BSPT MALE X 1/2" BSPT MALE FITTING	2
3	VIPERMIDMK1F-3R12PL BSP	1/2" QUICK CONNECT FEMALE ADAPTER	2



Viper Mid MKII
180 KG Complete Hose
VIP-00180

3.6.1 Viper Mid MK2 High Speed Kit Complete 180kg

Diagram illustrating the Viper Mid MK2 High Speed Kit assembly, showing the pump unit, hoses, and scraper plates. The diagram includes numbered callouts (1-17) identifying key components.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VIPERMIDMKII-COM-COMPLETE	VIPER MID MKII COMPLETE WITH FITTINGS, MALE COUPLER AND PLUGS	1
2	---	WIRE ROPE	---
3	VIPER-DS-AS22310	BOW SHACKLE	4
4	VIPER-HDR1W25	10MTRS 1/2" DWB HOSE WITH QUICK CONNECTS AT ONE END	2
5	VIPERHOSE-10M-1/2	0.6MTRS 1/2" DWB HOSE WITH QUICK CONNECTS AT ONE END	2
5A	VIPERHOSE-0.6M-1/2	OVERFLOW HOSE	1
6	VIPER-OVERFLOWHOSE	VIPER GREASE PUMP 45.1, 4.500 GRAMS/MIN	1
7	FLX-4081TWD5	GREASE FLOW CONTROL VALVE	1
8	SHT-DV12V	VALVE GRIP	1
9	PNX-15222	AIR PRESSURE REGULATOR WITH GAUGE	1
10	FLX-4303/8	180KG DRUM COVER	1
11	FLX-4308	180KG FOLLOWER PLATE	1
12	FLX-4317	VIPER LUBRICANT PAIL	1
13	---	POLYURETHANE SEAL	1
14	**REF1**	VIPER SCRAPPER PLATE	1 SET OF 4
15	**REF2**	TEE FITTING 1/2" BSP MALE (3)	1
16	HL-A-A-090808	1/2" BSP MALE X 1/2" BSP MALE ELBOW	1
17	HL-A-A-090808	1/2" BSP MALE X 1/2" BSP MALE ELBOW	2


REF1 : VIPER SEALS REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE
REF2 : VIPER SCRAPER PLATES REFER TO THE VIPER SEAL AND SCRAPER SELECTION GUIDE

Viper
WIRE ROPE LUBRICATOR


Viper Mid MKII HS
Complete 180KG Kit
--- VIP-00181

3.6.3 Viper Mid MK 2 High Speed Complete Pump 180kg

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FLX-40811WDS	VIPER GREASE PUMP 45.1 L 4.5 LTRS/MIN	1
2	HL-A-C-0808	1/2" BSP MALE X 1/2" BSP FEMALE SWIVEL FITTING	1
3	SFF-DV12V	GREASE FLOW CONTROL VALVE	1
4	VIPERMIDMKII-M-BIR12PL BSP	1/2" BSP MALE QUICK COUPLER	1
5	HL-A-A-0808	1/2" BSP MALE X 1/2" BSP MALE FITTING	1
6	FLX-4308	180KG DRUM COVER	1
7	FLX-4317	180KG FOLLOWER PLATE	1
8	HL-A-A-0406	1/4" BSP MALE X 3/8" BSP MALE FITTING	1
9	PNA-1823391911	AIR FLOW CONTROL VALVE	1
10	FLX-7180-3/8	AIR PRESSURE REGULATOR WITH GAUGE	1
11	HL-A-A-0406	1/4" BSP MALE X 3/8" BSP MALE FITTING	1
12		VIPER LUBRICANT PAIL	1



Viper Mid MKII HS
Complete 180 kg Pump Kit
V/P-00181

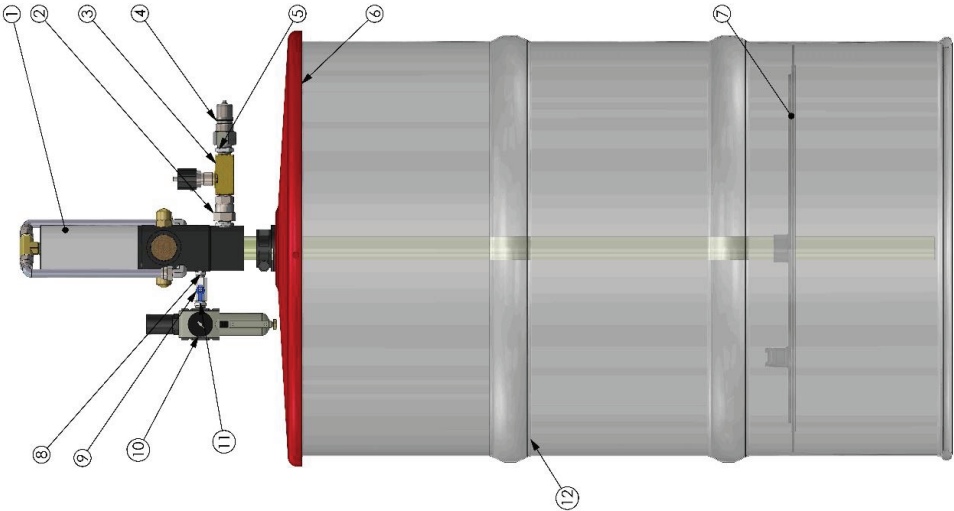

3.6.4 Viper Mid MK 2 High Speed Complete Hose 180kg






4. Viper Mid MK 2 Assembly Instructions (refer assembly video on website)

1. Remove all components from Viper Aluminium carry case, unpack from packing materials and lay out on a clean flat surface. Check all items are present as per your purchase order.
2. Remove grease pump noting the air inlet isolation valve, air regulator and high -pressure needle control valve are preassembled onto the pump.
 - Connect site specific compressed air connector to the air regulator. (Not supplied)
3. Remove lid from lubricant container and place follower plate onto the top of the lubricant. Press down firmly until the follower plate comes into contact with the lubricant.
 - Note the Viper lubricator should only be used with high quality wire rope lubricants with a consistency of NLGI#00 to #2.
4. Fit the drum cover over the top of the lubricant container and tighten the three securing screws until they contact the container.
5. Clamp the grease pump handle onto the grease pump body and tighten the two screws.
6. Slide the grease pump shaft into the opening of the drum cover and the follower plate. Push the grease pump down into the grease until it touches the base of the grease container.
7. Connect the high -pressure grease hose to the grease pump outlet via the quick connect coupling.




4. Viper Mid MK 2 Assembly Instructions Cont.


8. Remove the Viper Collar from the packaging materials and loosen the two clamping bolts allowing the Collar to open.
9. Fit the Scraper Plates to the Viper Mid using the counter sunk screws and the Allen Key provided.
NOTE: Scraper Plates are sized to suite the wire rope as per the Seal & Scraper Selection Guide.
10. Fit the Viper Seals into the Viper Mid Collar. Make certain that the grease inlet holes on the Seal and Collar are aligned.
NOTE: Seals are sized to suite the wire rope as per the Seal & Scraper Selection Guide.
11. Clamp the lubricator Collar fitted with Seals and Scrapers around the wire rope to be lubricated, tightening the two handles.
 - Face the Collar so the lubrication inlet is closest to the rope's entry point - refer to image A below. **DO NOT** attach the Collar with the lubrication inlet at the furthest point from the rope's entry point - refer to image B below.
 - Locate the Collar so the optimum length of wire rope can be lubricated in a single pass, this is typically close to the winch drum.
12. Attached the clear plastic drain hose to the Viper Mid Collar. This hose is to deliver excess lubricant back to the collection container

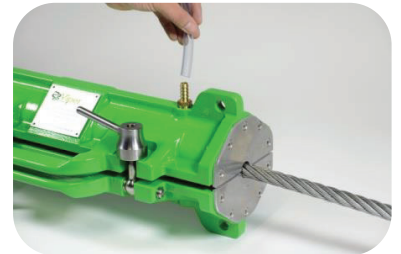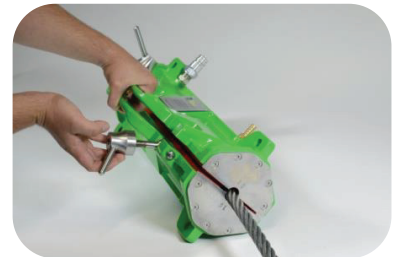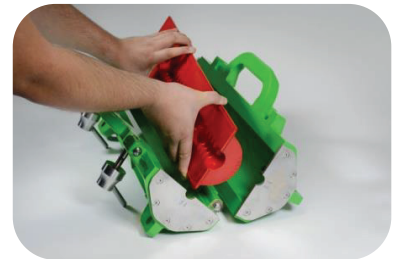

Lubrication Inlet

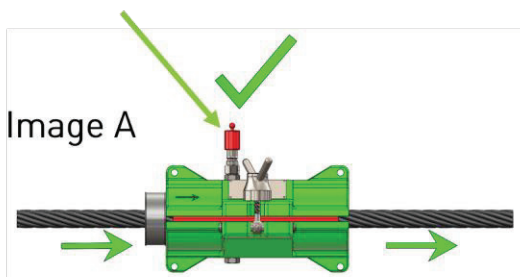



Lubrication Inlet

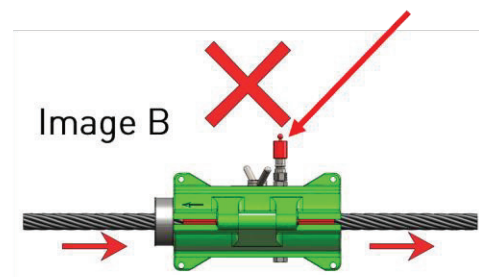

4. Viper Mid MK 2 Assembly Instructions Cont.


13. Connect the high -pressure lubricant delivery hose to the Viper Collar using the quick connect coupler.

- Standard Kit
- High Speed Kit

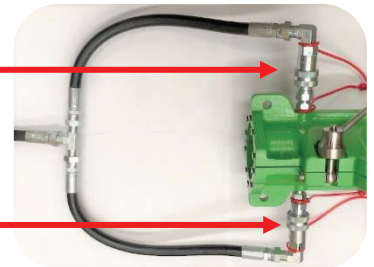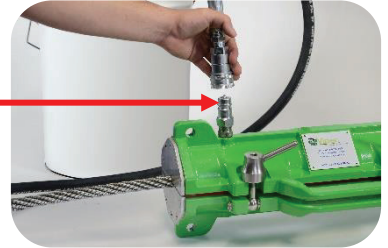

14. To secure the Viper lubricator Collar in place, use the nylon ratchet straps and 'Bow' shackles.

- Secure one end of the ratchet strap to one of the lugs on the wire rope entry end of the lubricator Collar via a bow shackle. Secure the other end to a suitable fixed position to prevent the lubricator Collar from travelling with the wire rope. Replicate this using the second ratchet strap, bow shackle and lug on the lubricator Collar.

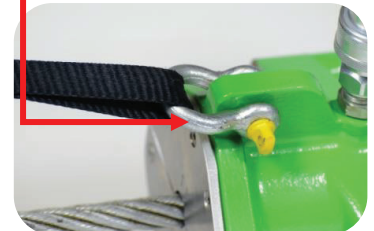

NOTE: the ratchet strap is in high tension and strain during operation. Please ensure all fittings are tightly secured prior to operation.

- The lubricator Collar must be able to move laterally during operation to ensure even wire rope spooling on and off the rope drum.

15. Connect the air supply to the air regulator unit fitted to the grease pump. Ensure the air shut -off valve is off, preventing the air from reaching the pump motor. Set the air pressure regulator to 7 bar.



5. Ratchet Strap Buckle Assemblies – Ref: AW107

Basic Steps of Operation

To Tighten:


1. Secure hooks on either side of load.
2. Insert free end of strap through slot A and pull through excess webbing.
3. Push down and pull up Handle B to work the ratchet strap until strap is as tight as possible.
 - a) Do not over tighten, as the straps are only designed to maintain position of the Viper Collar.
4. Ensure at least 2 to 3 revolutions of webbing are around centre cam A.
5. Push Handle B down to lock your Tie -Down.

To Release:

1. Pull back on quick release C and hold.
2. Pull handle B up and over to fully open flat position.
3. Pull tie -down up to loosen strap and remove from slot A.

To be used as a guide only.

Please note: Lubricate all moving parts on a regular basis.

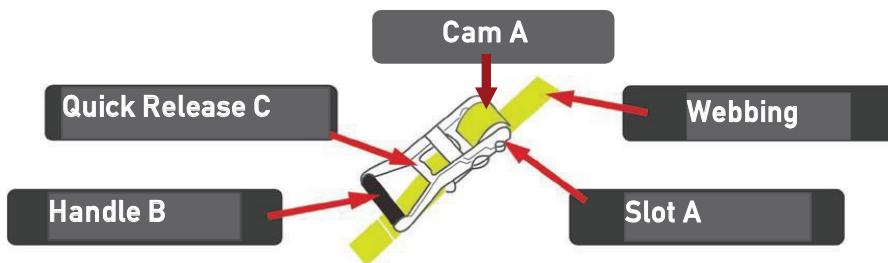

Use and Care Instructions – Webbing Load Resistant Systems Ref: AW116

Use: The selected lashing system should be both strong enough and of the correct length for the mode of use. Good lashing practice should always be followed; the fitting and removal operations of the lashings should be planned before starting a journey. The lashing should be suitably pre-tensioned and regularly checked.

CAUTION: NOT TO BE USED FOR LIFTING

INSPECTION: Web lashings and any fittings or coupling components attached should be subject to frequent visual inspection and regular examination by a competent person. Web lashings shall be withdrawn from service if there is a cause to doubt fitness for use.

MARKING: Use only legibly marked and labelled web lashing.

OVERLOADING: Lashing systems should not be overloaded. Mechanical aids such as levers or bars should not be used unless they are specifically designed for use with the device.

PROTECTION: The webbing and labels should be protected against friction, abrasion and damage from load with edge radii less than twice the webbing material thickness, using protective sleeves or corner protectors.

SERVICEABILITY: Normal wear and tear can reduce the strength of the webbing assemblies. If webbing is damaged by more than 10% of its original state due to abrasion, cuts, prolonged exposure to sunlight or chemicals then it should be replaced. Similar, if tensioning devices such as hand ratchets and end fittings are damaged by wear or corrosion they should be replaced.

RESPONSIBILITY: It is the responsibility of the owner, the driver and the person in charge of the loading to ensure that a vehicles load restraint and attachments, and the load securing equipment, are serviceable and strong enough for their application.

NOTE: The user of this strap assumes all risk and liability for its handling and use.

For further information please refer to RTA 'Load Restraint Guide.'


6. Operating Instructions Viper Mid MK 2

With the Viper Mid Wire Rope Lubricator assembled and mounted correctly as per Assembly Instructions, you are now ready to operate the system and lubricate the nominated wire rope.

1. Make sure the high -pressure lubricant flow control valve is closed (turn clockwise to close).
2. Open the air supply to the lubricant pump via the air control valve. The pump may start to pump for a short period but will stop as the lubricant reaches the closed lubricant flow control valve. Set the air pressure regulator to 5.5 bar (80 psi) and adjust up to 7 bar (105 psi) if required.
3. Open the high -pressure lubricant flow control valve slowly by turning anti clockwise and proceed to fill the installed Seal with lubricant. Once lubricant appears at the wire rope entry point or in the overflow drain line, close the lubricant flow control valve by turning clockwise.
4. THE VIPER IS NOW CHARGED & READY FOR OPERATION.
5. Start the wire rope moving through the Viper Mid Collar and then slowly open the lubricant flow control valve. Continue to open until an even coating of grease is visible on the wire rope exiting the collar.
 - Speeds of up to 2,000 metres per hour are possible but this depends on a number of factors, including the rope size, speed and specific lubricant in use.
6. The lubricant flow control valve should be adjusted as required to provide the correct lubricant flow rate into the lubricator Collar and thereby onto and into the wire rope.
 - If the lubricant flow rate is too high lubricant will begin leaking out of the Viper Mid Collar at the rope entry point or from the excess lubricant, clear hose.
 - Reduce the lubricant flow by turning the flow control valve clockwise. Alternatively increase the wire rope speed through the lubricator Collar until the correct amount of lubricant appears on the wire rope.

6. Operating Instructions Viper Mid MK 2 Cont.

7. Visually inspect the wire rope as it exits the Collar to observe if full lubricant coverage is being achieved.
 - If insufficient coverage is being achieved, increase lubricant flow rate by adjusting the lubricant metering valve anti clockwise until an even lubricant coating occurs.
 - Alternatively reduce the rope speed until an even lubricant coating occurs.
8. If lubricant leakage occurs around the Collar, check the Collar is correctly tightened and Seals are fitted correctly.
9. An even balance between lubricant volume and wire rope travel speed is required to achieve an even lubricant film combined with optimum penetration.
10. Once the optimum lubricant coverage is achieved, run the complete rope at a consistent speed through the Viper Mid Collar.
11. Note the Viper Mid Collar with flexible Seals is not a pressure vessel and is not designed to hold pressure. The grease pressure is generated by both the pump and the action of the rope travelling through the lubricant chambers in the Seal. The Viper grease pump should not be operated with the wire ropes stationary.

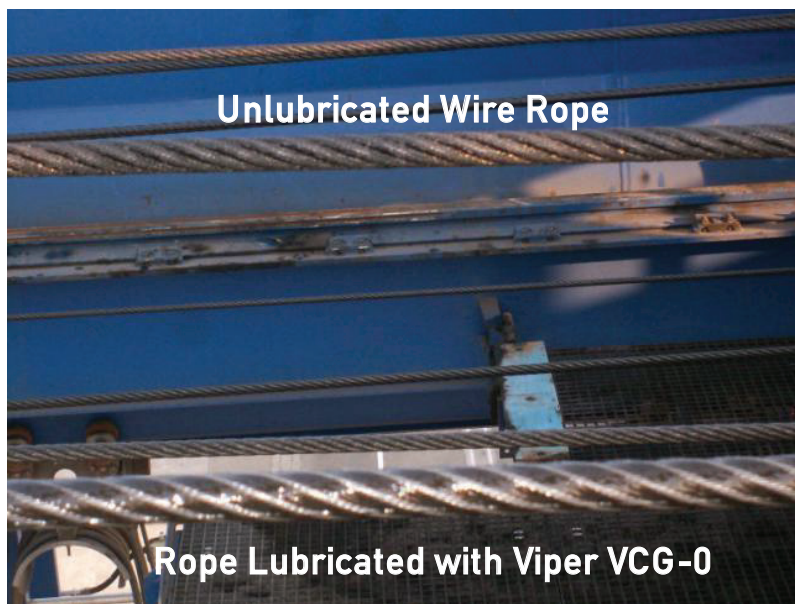

7. Lubricant Penetration

To inspect internal lubricant penetration, use a sharp spike or heavy -duty screwdriver to open the wire rope. Alternatively, two pipe wrenches secured one metre apart, and rotated in opposite directions will allow visual inspection.

Lubricant penetration to the wire rope core is often difficult due to the following:

- Wire rope design, particularly anti -spin and locked core wire ropes.
- Dirty or contaminated wire ropes. (Using a Viper Wire Rope Cleaner is recommended).
- Ropes contaminated with solid used lubricant coatings. (Using a Viper Wire Rope Cleaner is recommended).

During the wire rope operation, the rope movement onto the drum and over sheaves is known to assist with the lubricant penetration.

If an NLGI#2 grade grease is used it may be necessary to pre -heat the lubricant at ambient temperatures below 5 °C (41 °F) to ensure adequate penetration. Check with lubricant suppliers for method of pre -heating and individual lubricant specifications. Be sure that the lubricant used will adequately protect your wire rope from corrosion and wear.

8. Equipment Specifications

Drum Pump

Maximum operating air pressure	8 bar/120 psi
Pump ratio	45:1
Flow rate approximately	4,500 gram per min
Volume of compressed air	250 L/min at 7 bar

Guideline pressures are as follows:

Air pressure for all Wire Rope Diameters 5.5 – 7 bar (80 -105 psi).

Viper Collar

- Cast aluminium construction with enhanced mechanical properties and excellent resistance to corrosion, heat treated to T6.
- Lugs tested to withstand 800kg of resistance.
- Coating: 3 coat treatment.
- Salt – Spray Resistance to ASTM B117 -73 - 2,000 hours
- Humidity Resistance to ASTM D2247 - 1,000 hours

Seals

- Estimated average operation life – 10,000 + metres
- Shelf life 2 -3 years (based on correct storage)
- Chemically resistant to commercially available mineral wire rope lubricants.
- The lubricator Seals may be washed with mild petroleum cleaner.
- Do not leave the Seals to soak in cleaning fluid which may be detrimental to their composition.
- It is important to store the Seals away from UV light. The Seals will be harmed if left for extended periods in sunlight.
- Seals should be kept in sealed plastic bag as supplied.

Scrapers

- 5083 Grade Aluminium Alloy high resistance to corrosion and ideal for marine applications.

NOTE: Lubrication Engineering reserves the right to change specifications as and when required.

9. Trouble Shooting

1. NO LUBRICANT ON WIRE ROPE AFTER START UP

- a) Check lubricant container content.
- b) Check lubricator pump air shut -off valve is open.
- c) Check air pressure on gauge.
- d) Check lubricant control valve is open (for High -Speed Kits only).

2. INADEQUATE LUBRICATION COVERAGE

- a) Utilise lubricant drum heater or change to lighter viscosity if ambient temperature is 5 °C or below.
- b) Increase air pressure and hence lubricant flow, until correct quantity of lubricant is on wire rope.
- c) Open lubricant flow control valve fully to increase lube flow.
- d) Reduce wire rope speed to ensure complete coverage.

3. TOO MUCH LUBRICANT ON WIRE ROPE

- a) Reduce volume of lubricant via the flow control valve (for High -Speed Kits only)
- b) Increase wire rope speed through the lubricator Collar.
- c) Use a combination of both.
- d) Investigate type of wire rope lubricant used.
- e) Measure rope diameter and ensure correct size Seals in use.

4. LEAKING FROM COLLAR

- a) Tighten Collar clamping screws.
- b) Check correct Viper Seal is being used for wire rope size.
- c) Check air pressure and reduce if required.
- d) Adjust lubricant flow rate from control valve.
- e) Check condition of Seals for any damage.

10. Safety Recommendations – Caution Level Rating

- Before installation of the wire rope lubricator onto the cable, ensure the work area is clean and safe to work in with adequate space around the cable where the Viper Collar will be attached.
- Ensure buckles and straps, D shackles and attachment points used to anchor the Viper Lubricator are rated for a minimum WWL of 500kg.
- Check hydraulic hose, couplings air lines and fittings for damage or wear, before connecting to grease pump and Viper lubricator Collar. Carry out visual inspection of the Viper Collar to ensure it has not been damaged during transport or handling. Damage to the casing that prevents it from sealing correctly will severely reduce the unit's ability to force lubricant into the ropes core and could be a potential safety hazard.
- Always ensure the return grease line feeds to a container of suitable size for receiving the excess grease from the Viper lubricator. Grease allows to flow from the return line without being captured may cause a serious slip or environmental hazard.

NOTE: Lubricants vary in their hazard and environmental ratings. Please ensure Safety Data Sheets (SDS) for all lubricants used with the Viper are kept in close proximity to the kit. Lubrication Engineering recommend a copy of the lubricant in use SDS is kept in the Aluminium carry case for reference as required.

11. Safety Recommendations – Danger Rating

DANGER RATING



- Before attaching the Viper lubricator Collar to the cable, you must ensure the cable winch control has been locked out and tagged. Serious injury or death may occur should the cable winching equipment be activated while the Viper Lubricator is being fitted to the cable.



- When the Viper Lubricator has been assembled, attached to the cable and anchored in position, the lubrication system can be activated. While in operation the grease pump can generate up to 5,500 psi grease pressure. **Under no circumstances** should the Viper Collar be opened, or the grease hose disconnected while under pressure as this can cause serious injury.



- While in operation the Viper Lubricator utilises both high -pressure air, up to 120 psi max and high -pressure grease up to 5,500 psi. Always wear appropriate PPE (personal protective equipment) suitable for your work environment while carrying out the cable lubrication operation.



- Suggested PPE includes, safety glasses, leather gloves, safety boots, long sleeved shirts, high visibility vest, hard hat and hearing protection.



- Lubrication Engineering recommend to only use pumps, fittings, hoses and accessories supplied or recommended by Lubrication Engineering. All our components have been tested to ensure they will work safely and effectively for extended duty cycles. Using non approved components may lead to unexpected failure of the Viper Lubricator and/or its components causing serious injury to maintenance personnel.

12. Viper Mid MK 2 Wire Rope Lubricator - Guarantee

The Viper Mid MK 2 Wire Rope Lubricator Kit and all the components are guaranteed for a period of 12 months from date of purchase against any fault of manufacture or material failure.

Fair wear and tear are expected of the unit and are not covered by this warranty. Tearing of the Seals due to broken wires or other obstructions are not covered by this warranty.

Any parts to be claimed under warranty must be first returned to Lubrication Engineering Pty Ltd for inspection prior to warranty being granted.

Commercially available wire rope lubricant NLGI 00 -2.
(Approved Lubricants list available)

The Viper Mid MK 2 is supplied and support by:



ASSET RELIABILITY SOLUTIONS™

1919 E. Tulsa
Wichita, KS 67216
800-537-7683
www.LElubricants.com